



1. Ball Valve – Close for normal operation. Open when filling or draining the vessel.
2. Ball Valve – (Optional) Open for normal operation. Close when air eliminator is to be removed for service.
3. Automatic Air Eliminator
4. Check Valve – Prevents air from siphoning into vessel
5. Pipe Unions
6. Pressure Relief Valve – Set at maximum working pressure (design pressure) of vessel or lower
7. Flow Indicator (Optional)



Velcon products are sold and serviced by a world-wide representative network. To order, contact Headquarters or your **LOCAL REPRESENTATIVE:**

COMPANY HEADQUARTERS:
Velcon Filters, Inc.

1210 Garden of the Gods Road
Colorado Springs, CO 80907-3410
Phone: 1.800.531.0180 / 1.719.531.5855
Fax: 719.531.5690
e-mail: vfsales@velcon.com
www.velcon.com

MANUFACTURING PLANTS LOCATED AT:

Colorado Springs, Colorado
Sylacauga, Alabama

OVERSEAS AFFILIATES:

Frankfurt/M., Germany & Singapore

***Liquid Filtration
and Separation
Specialists***